




MONTAGEANLEITUNG

ASSEMBLING INSTRUCTIONS

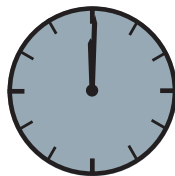

2 Stunden



weight: ca. 16,5 kg

SEPARATING WALL INTERIOR / TRENNWAND INNENRAUM

– Artikel-Nr: 19R 5260








Wild Land Drivers GmbH
Sportplatzstr. 4
D-85635 Höhenkirchen b.München

E-Mail: info@wild-land-drivers.de
Phone: +49 (0) 8 10 2 / 89 58-16

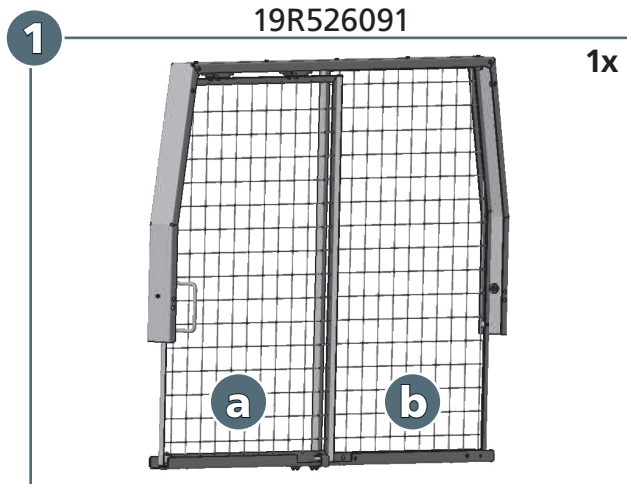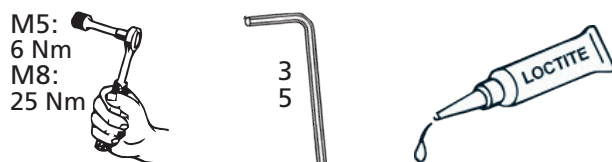


mounting kit: 19R9260




	M8x16; DIN 7991 Zn	4x
	M5x25; ISO 7380 Zn	5x
	M8x12; ISO 7380 Zn	8x
	M8x30; ISO 7380 Zn	2x
	Ø8,4; DIN 9021 Zn	4x

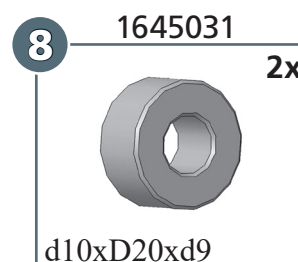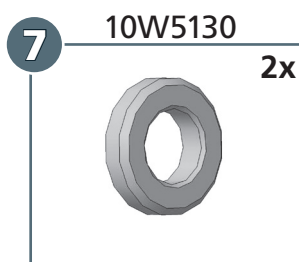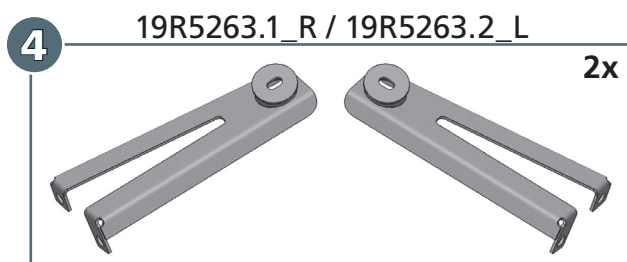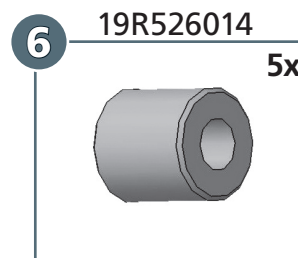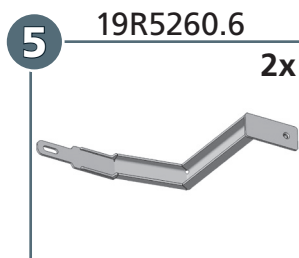
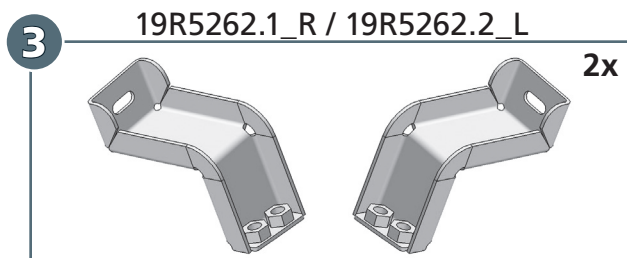
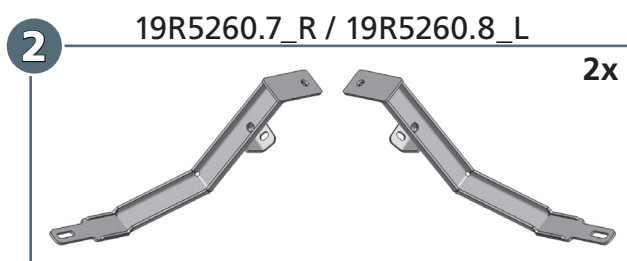


Step 1

This diagram shows the front panel being attached to the base. A screwdriver is used to tighten a screw that secures the front panel to the base. The text "2x" indicates that two screws are required for this step.

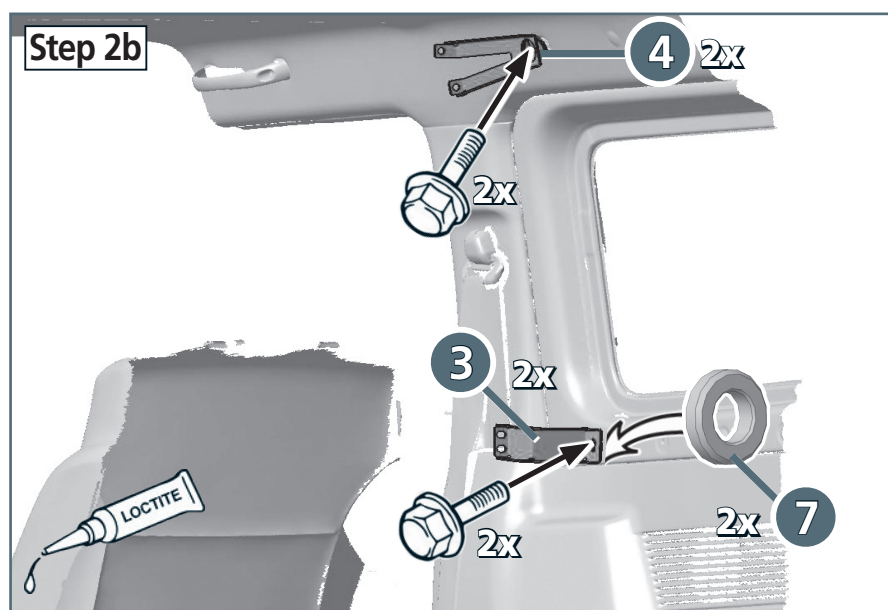


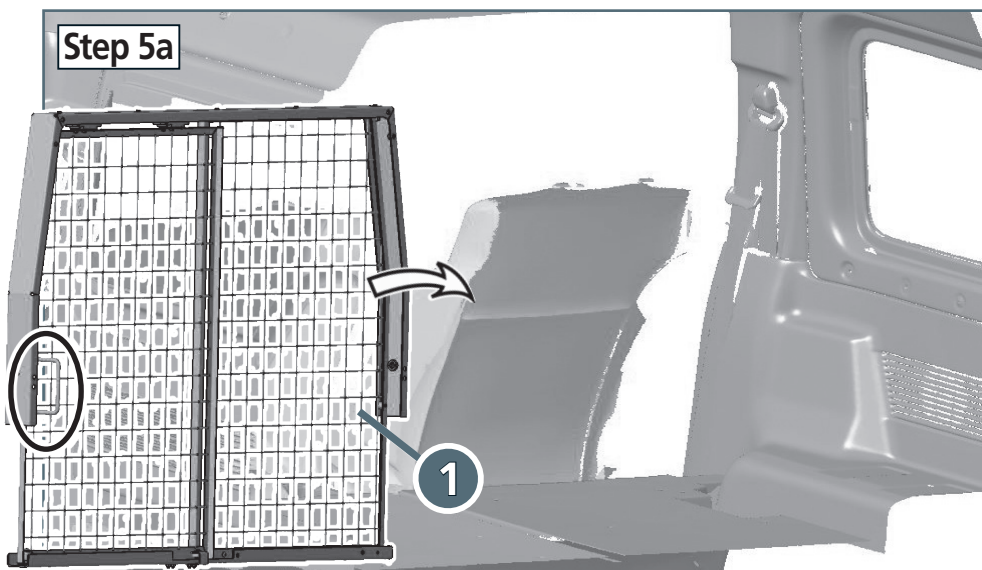
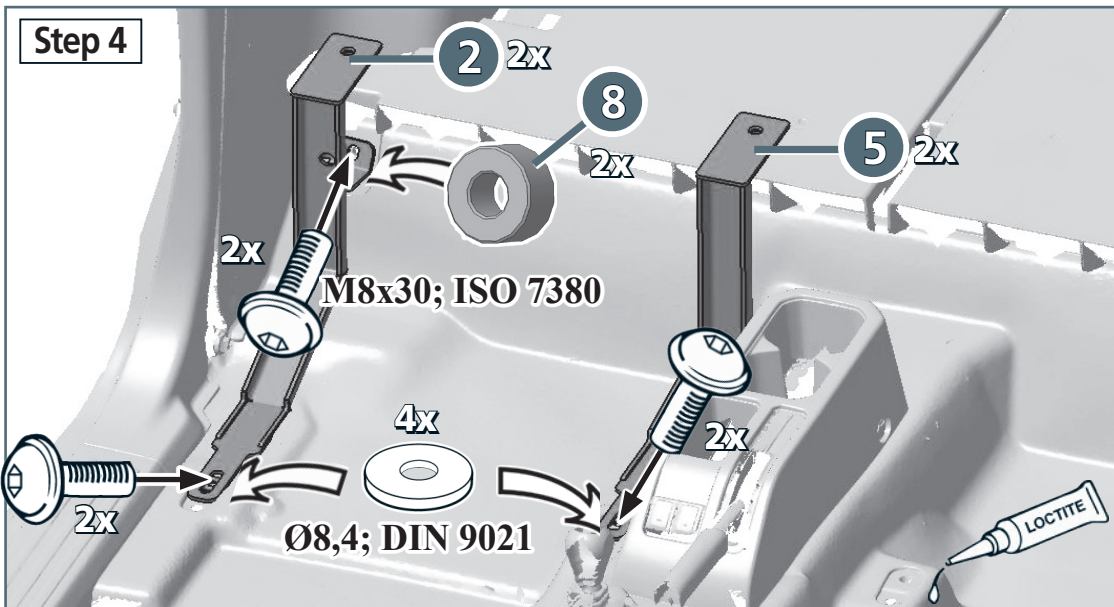
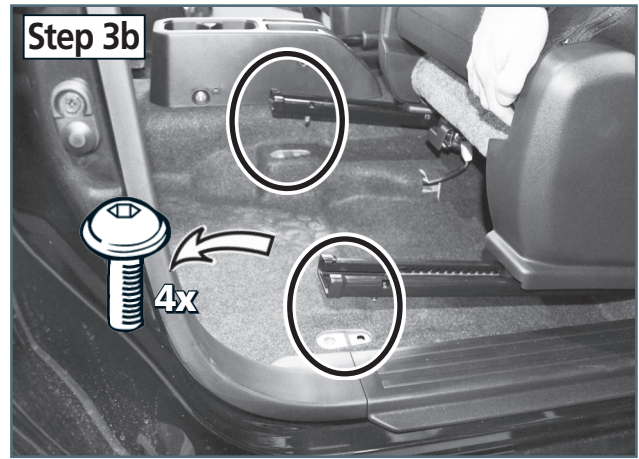


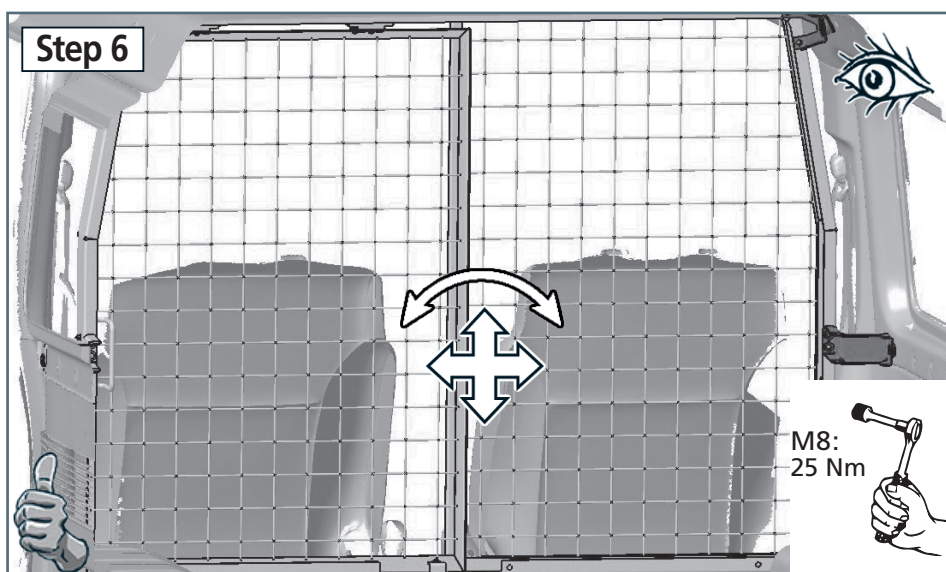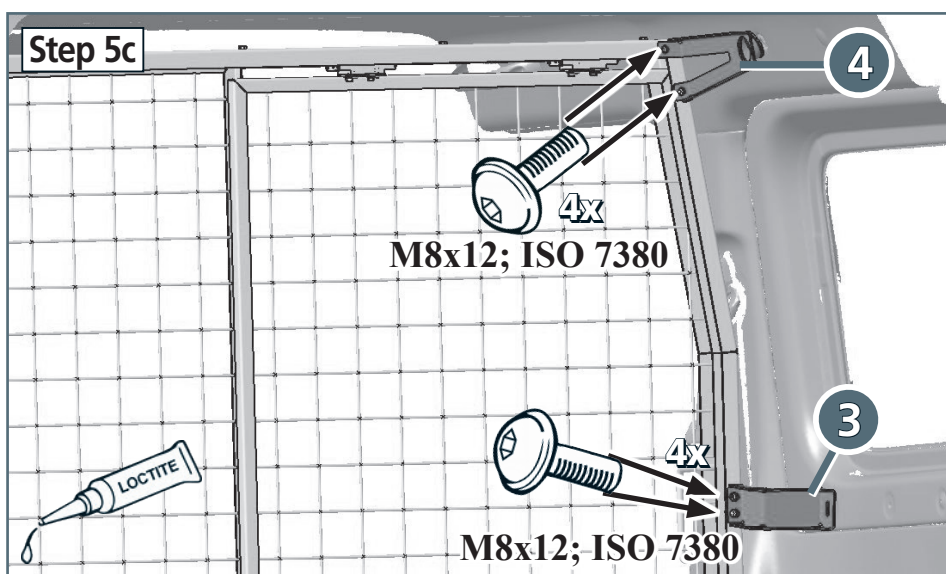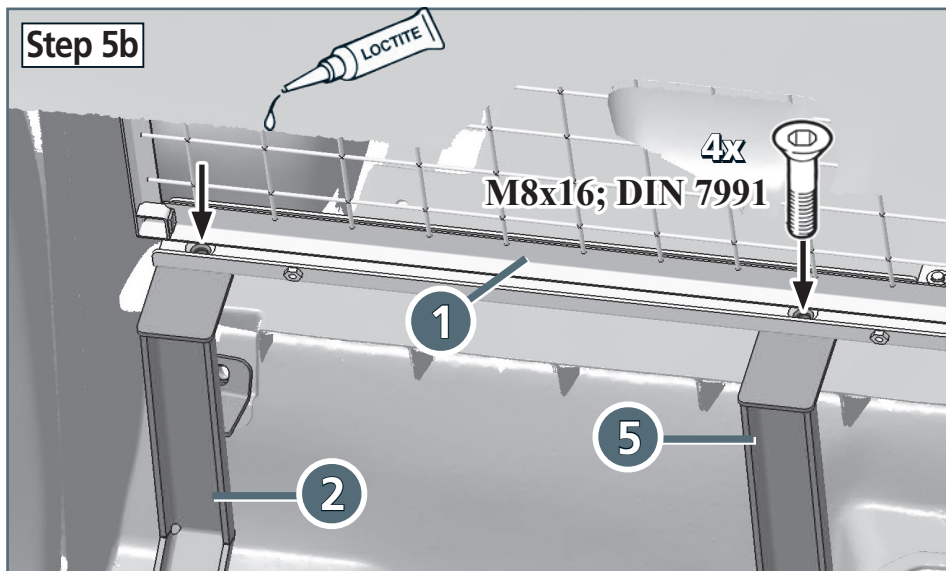






Griff rechte Seite / Handle on the right



Step 1 - 4

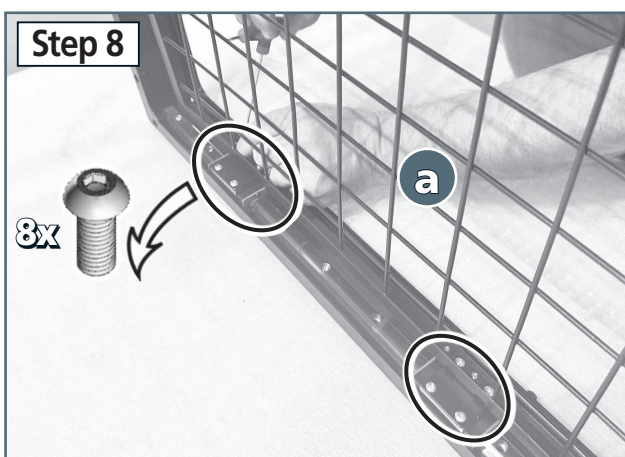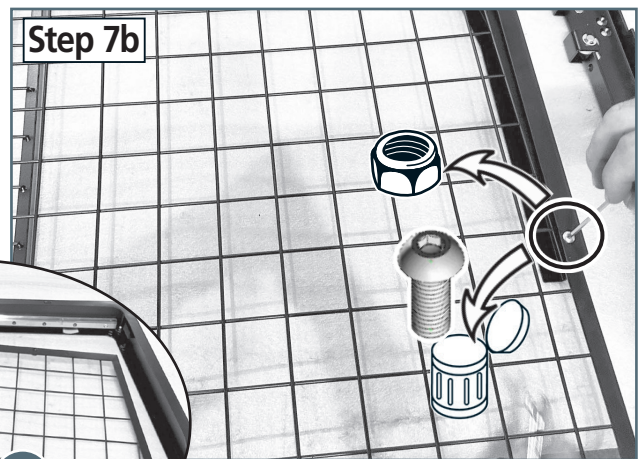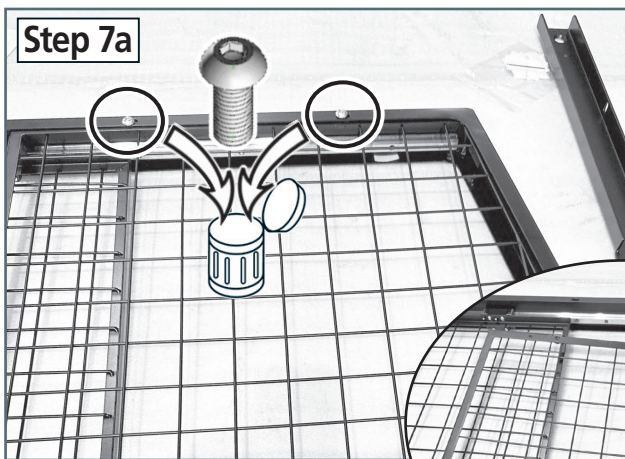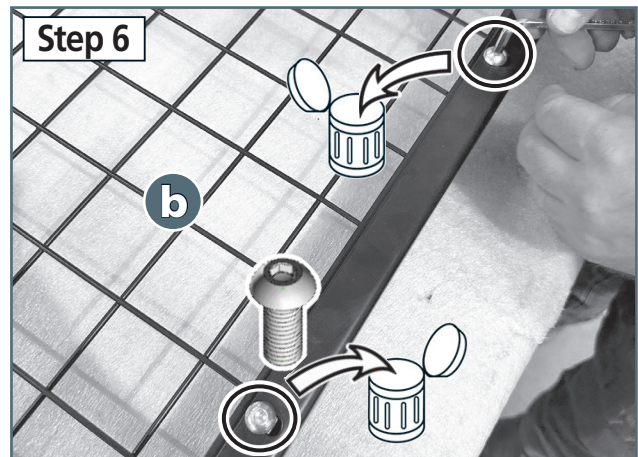

Revision 7: 06.03.2024

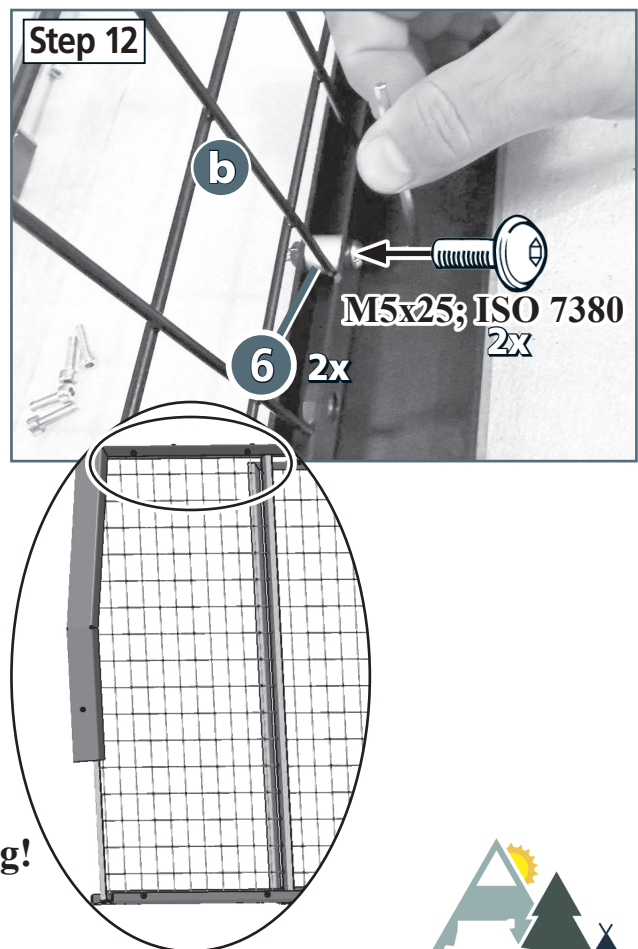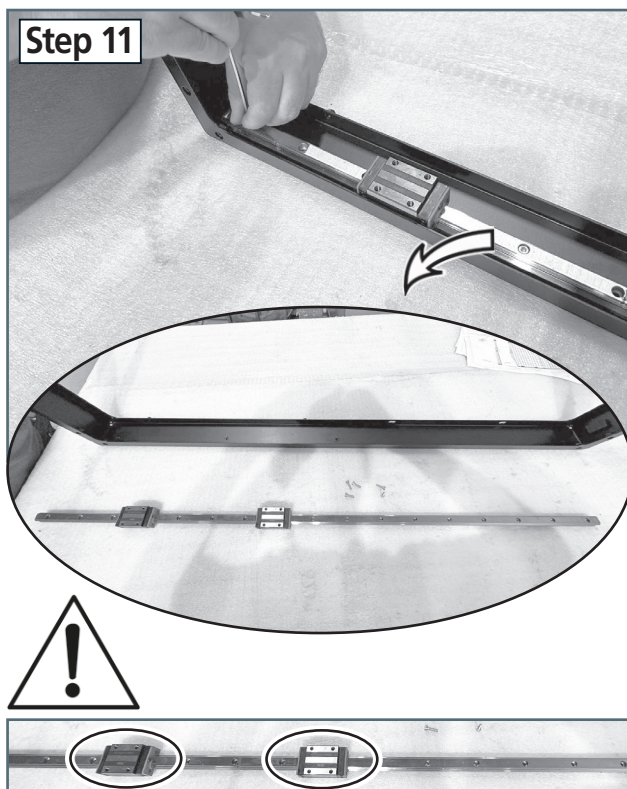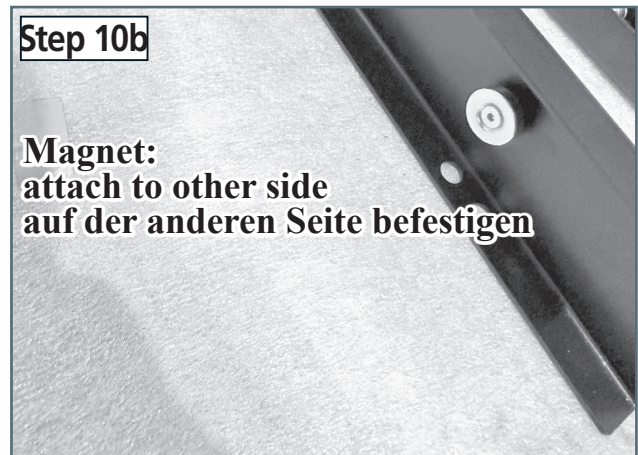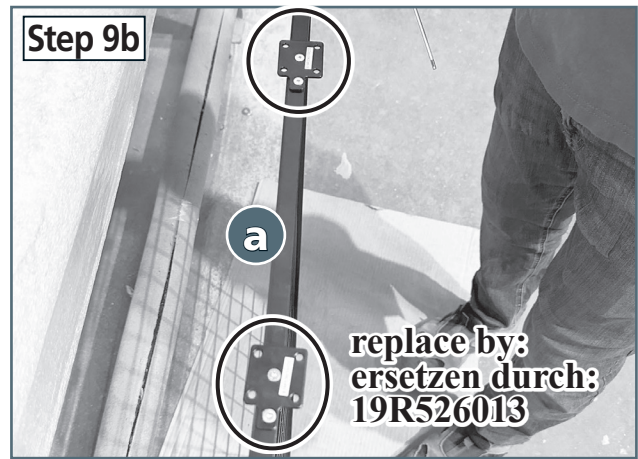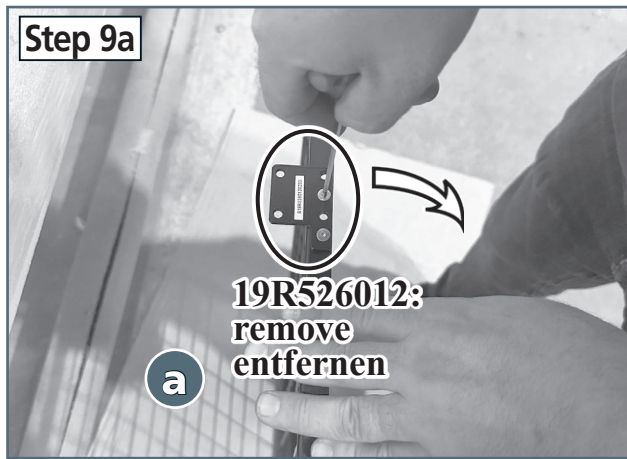

Nicht von Schiene lösen!
Ansonsten nicht mehr funktionstüchtig!
Do not detach from the rail!
Otherwise no longer functional!

