




MONTAGEANLEITUNG ASSEMBLING INSTRUCTIONS

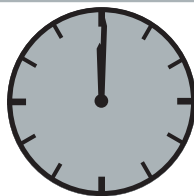

60 Minuten

weight: ca.10,5 kg



REAR BUMPER GUARD/HECKROHR

- Artikel-Nr: 19R4137(S)

Wild Land Drivers GmbH
Sportplatzstr. 4
D-85635 Höhenkirchen b.München

E-Mail: info@wild-land-drivers.de
Phone: +49 (0) 8 10 2 / 89 58-16

M6(A2):
8,8 Nm
M8 (A2):
21,4 Nm
M10(A2):
44 Nm

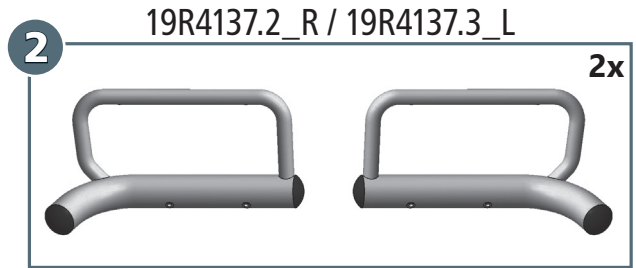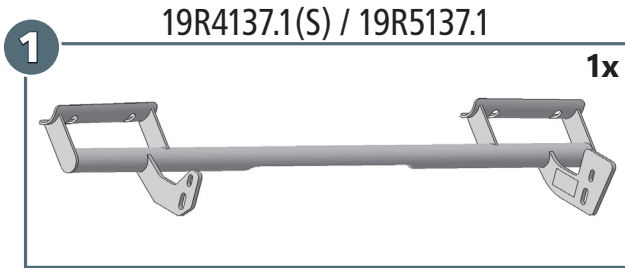

mounting kit: 19R9137

<p>3 19R5089 2x</p>	<p>4 19R5094 2x</p>	<table border="1"> <tr> <td></td> <td>M6x40; DIN 933 A2</td> <td>2x</td> </tr> <tr> <td></td> <td>M8x25; DIN 933 A2</td> <td>4x</td> </tr> <tr> <td></td> <td>M10x40; DIN 933 A2</td> <td>2x</td> </tr> </table>		M6x40; DIN 933 A2	2x		M8x25; DIN 933 A2	4x		M10x40; DIN 933 A2	2x
	M6x40; DIN 933 A2	2x									
	M8x25; DIN 933 A2	4x									
	M10x40; DIN 933 A2	2x									
<p>5 19R5720 4x</p> <p>2 mm</p>	<p>6 005496 2x</p> <p>Ø6,6 A2</p>	<p>7 005498 4x</p> <p>Ø9 A2</p>	<p>8 005494 2x</p> <p>Ø11 A2</p>								

article no.:
19R4137(S) inox
19R5137 black steel

Revision 6: 19.01.2022



