



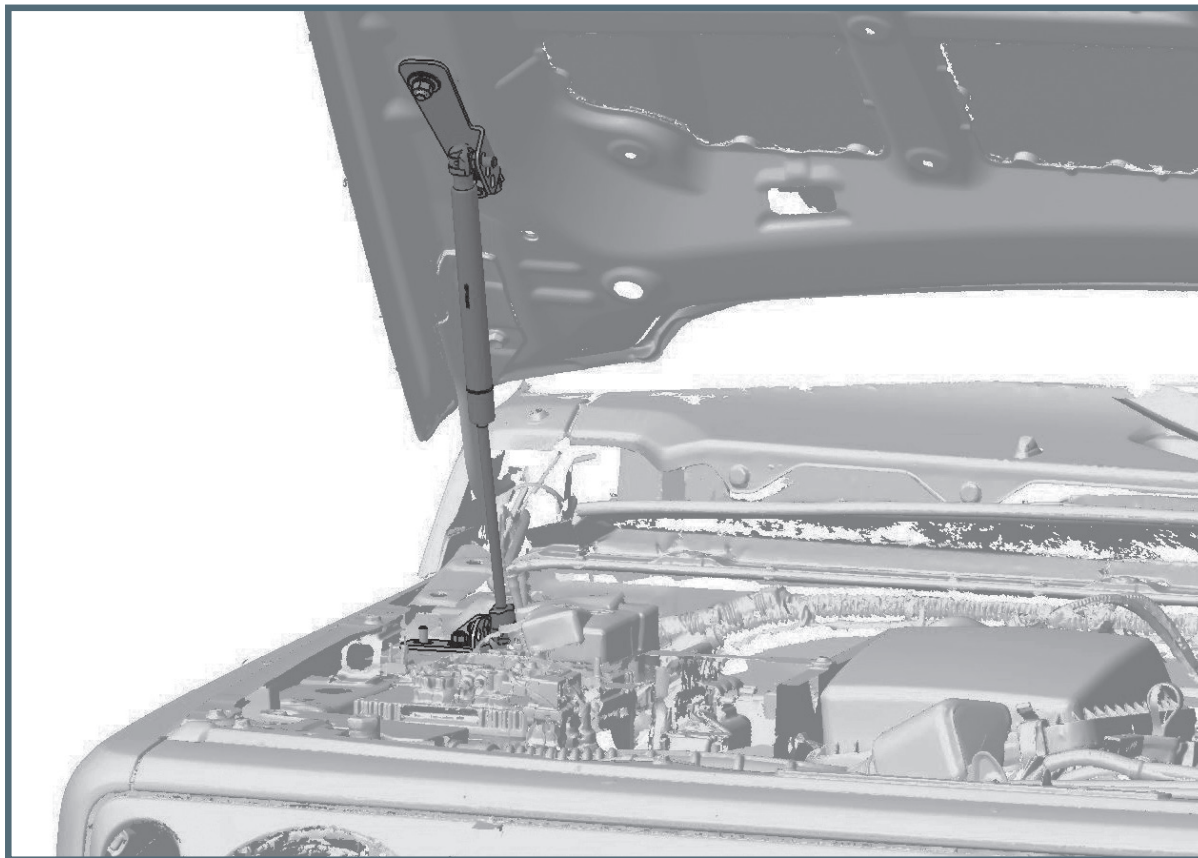

MONTAGEANLEITUNG

ASSEMBLING INSTRUCTIONS

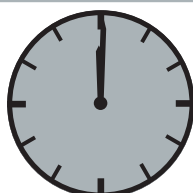

60 Minuten

weight: ca. 1 kg


GAS SPRING MOUNTING KIT / GASDRUCKFEDER ANBAUSATZ

- Artikel-Nr: 19R 4335

Wild Land Drivers GmbH
Sportplatzstr. 4
D-85635 Höhenkirchen b. München

E-Mail: info@wild-land-drivers.de
Phone: +49 (0) 8 10 2 / 89 58-16

M6 (A2):
8,8 Nm
M8 (A2):
21,4 Nm

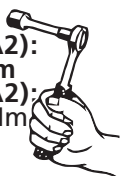


10
13




1

19R4335.1_R / 19R4335.2_L

2x

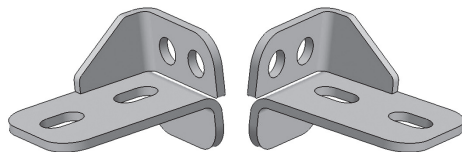

M8; DIN 934 A2

4x



M8; DIN 439 A2

2x



M6; DIN 985 A2

4x



M8; DIN 985 A2

2x



Ø8; DIN 127 A2

6x



Ø8,4; DIN 125 A2

2x



Ø6,2; DIN 9021 A2

4x




Ø8,4; DIN 9021 A2

6x

2

19R4335.3_R / 19R4335.4_L

2x

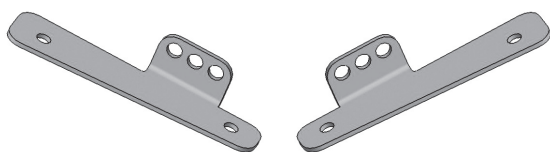

3

19R4127

2x




M8

4

19R4227

2x

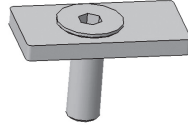

M8

5

19R4028

2x











M6

6

Gasdruckfeder Tuna Lift CAE 146 378 150N

2x



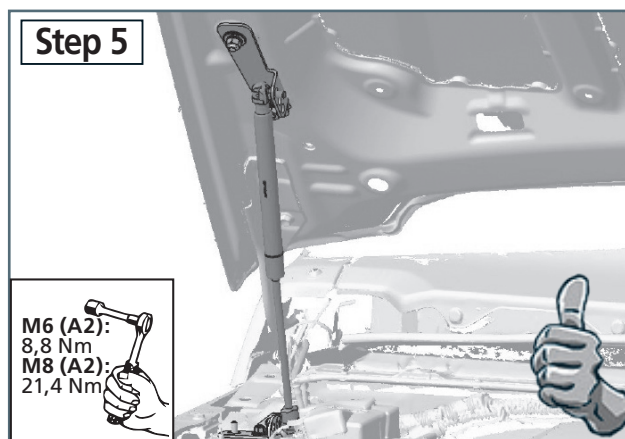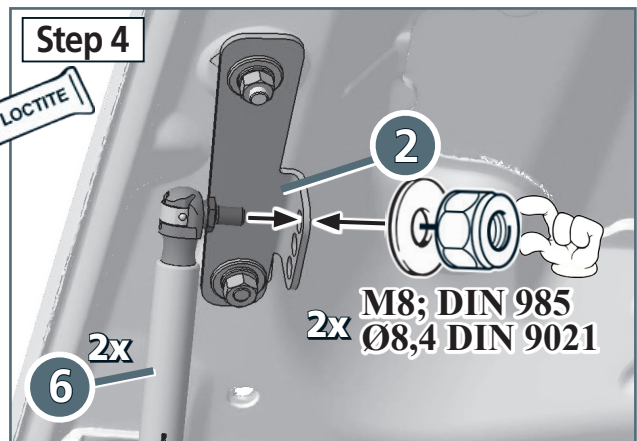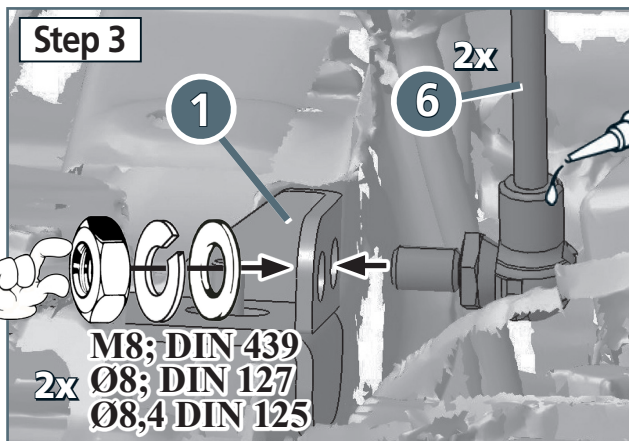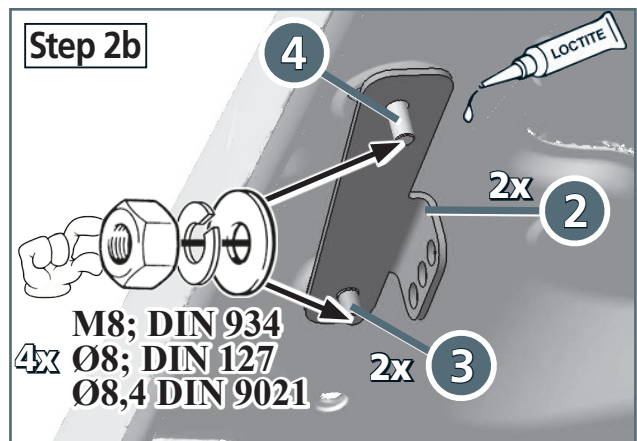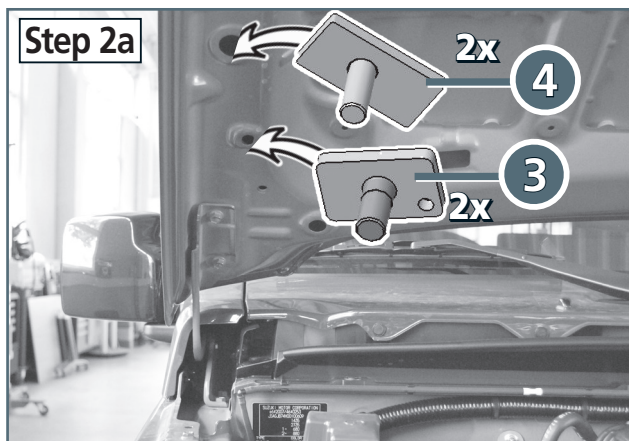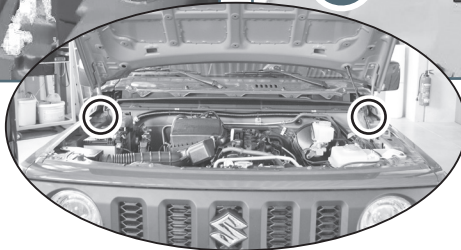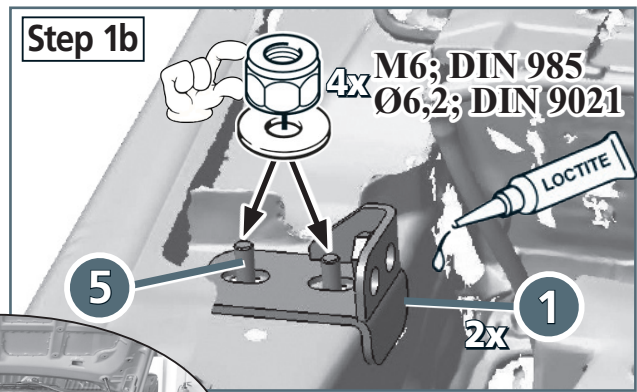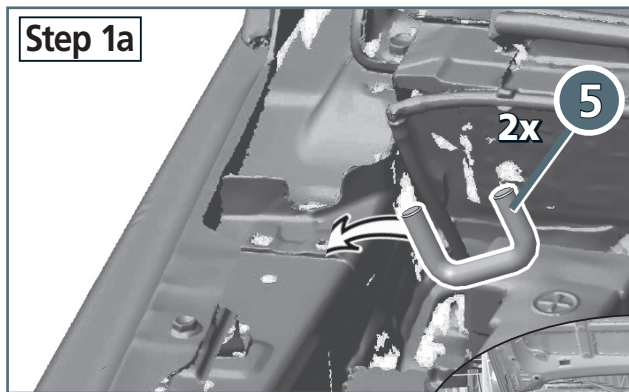

Revision 3: 06.03.2024

