


MONTAGEANLEITUNG ASSEMBLING INSTRUCTIONS

3 Jahre Garantie

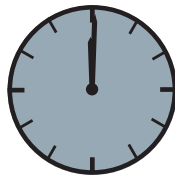

2 Stunden



















weight: ca. 5,5 kg

MOUNTING KIT WOODEN PLANK FOR REAR / MONTAGESATZ HOLZAUFLAGE FÜR HECK


- Artikel-Nr: 19R 9049

Wild Land Drivers GmbH
Sportplatzstr. 4
D-85635 Höhenkirchen b.München

E-Mail: info@wild-land-drivers.de
Phone: +49 (0) 8 10 2 / 89 58-16

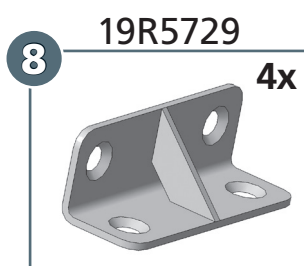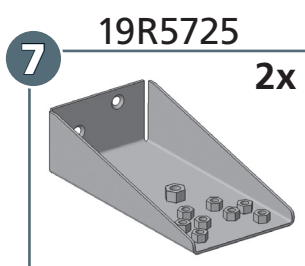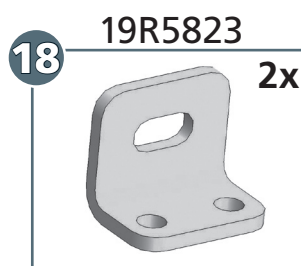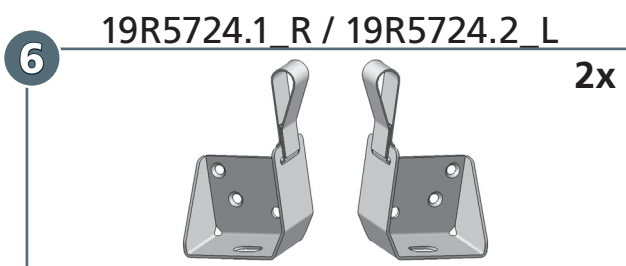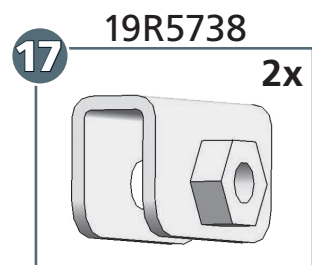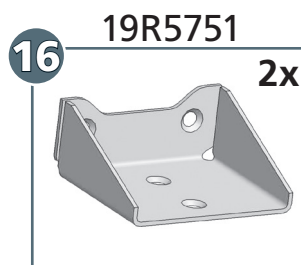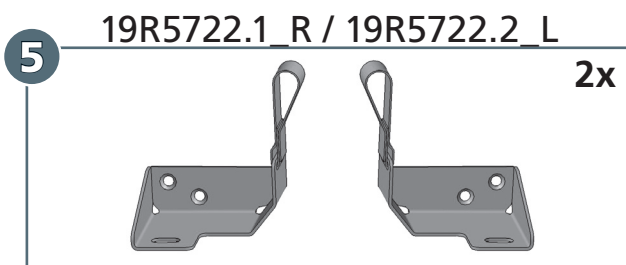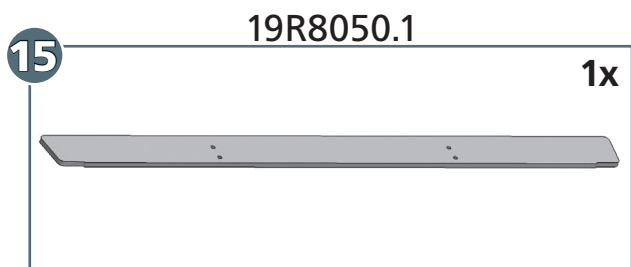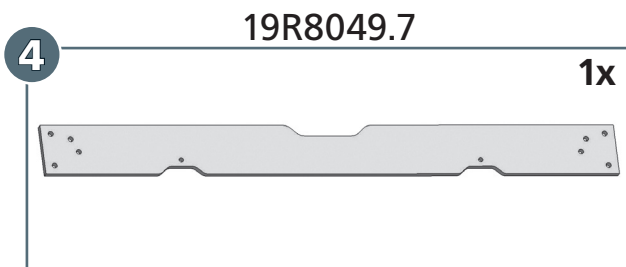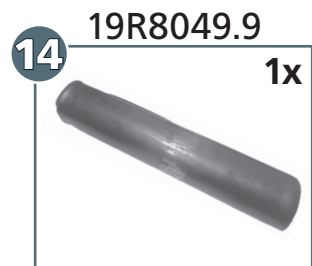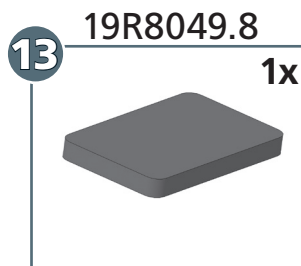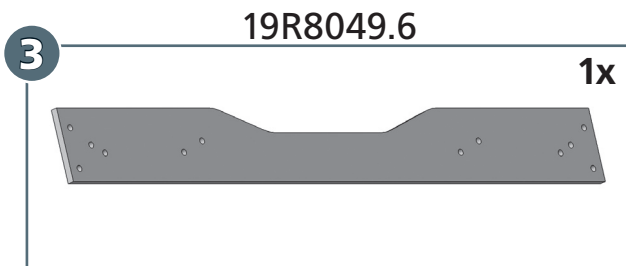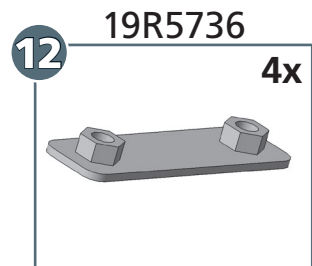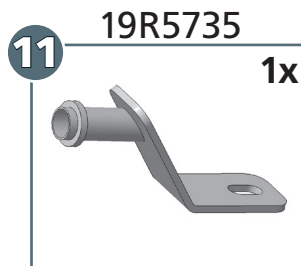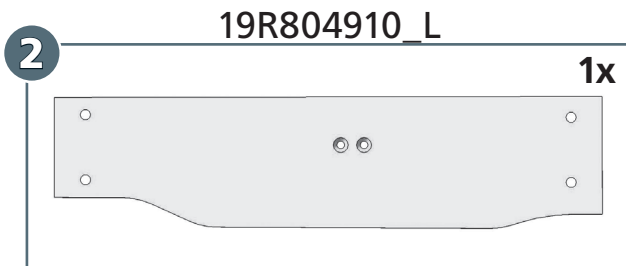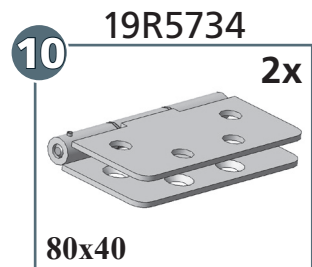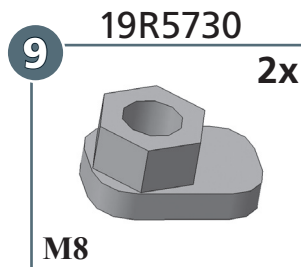
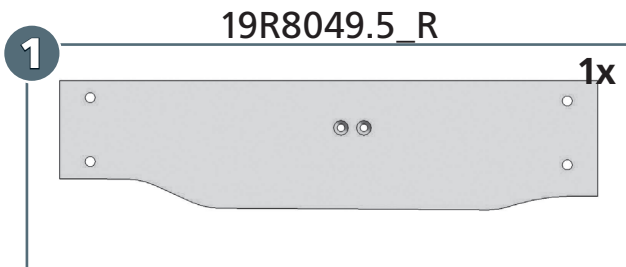


M5:
6Nm
M6:
10Nm
M8:
25Nm
M10:
50Nm







	M8x20; DIN 933 Zn	2x
	M10x1,25x25; DIN 933 Zn	3x
	M5x18; DIN 7991 Zn	4x
	M6x12; DIN 7991 Zn	16x
	M6x16; DIN 7991 Zn	28x
	M6x20; DIN 7991 Zn	10x
	Ø8,4; DIN 9021 Zn	2x
	Ø10,5; DIN 9021 Zn	3x
	M5; DIN 985 Zn	4x
	Anschweißmutter M6 038511	32x
	Clip Wagenheber	2x
	Clip Radschlüssel	2x
	Kunststofffüße LX.25- SW13-M8x72; 431019	2x

Not included! Must be ordered separately!
Nicht enthalten! Muss separat bestellt werden!

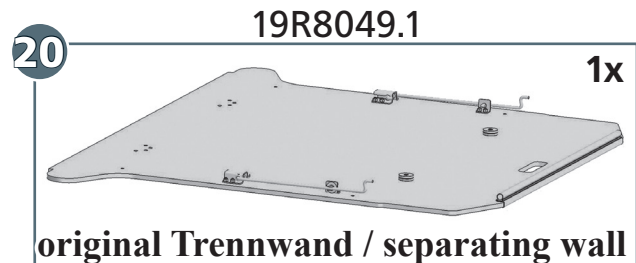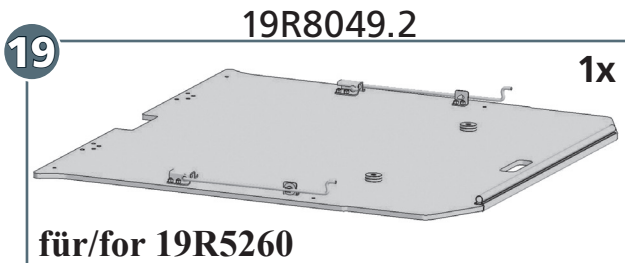


Step 1

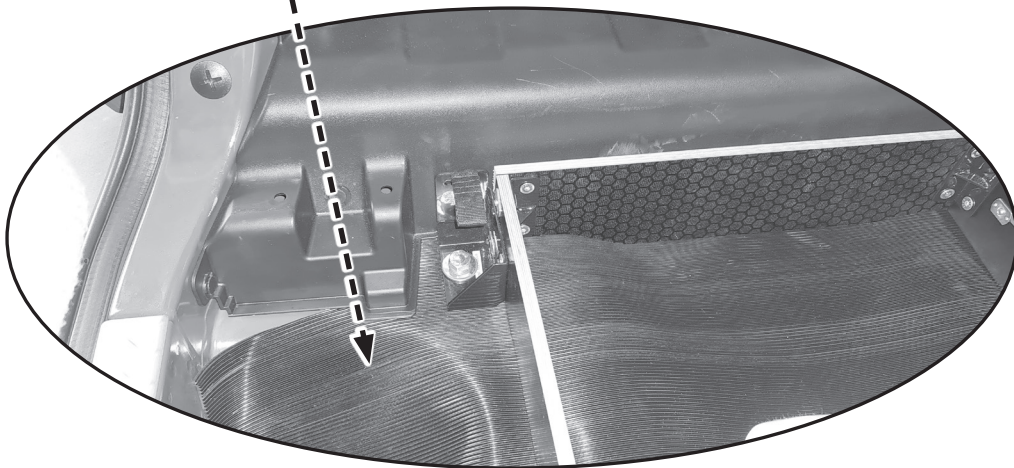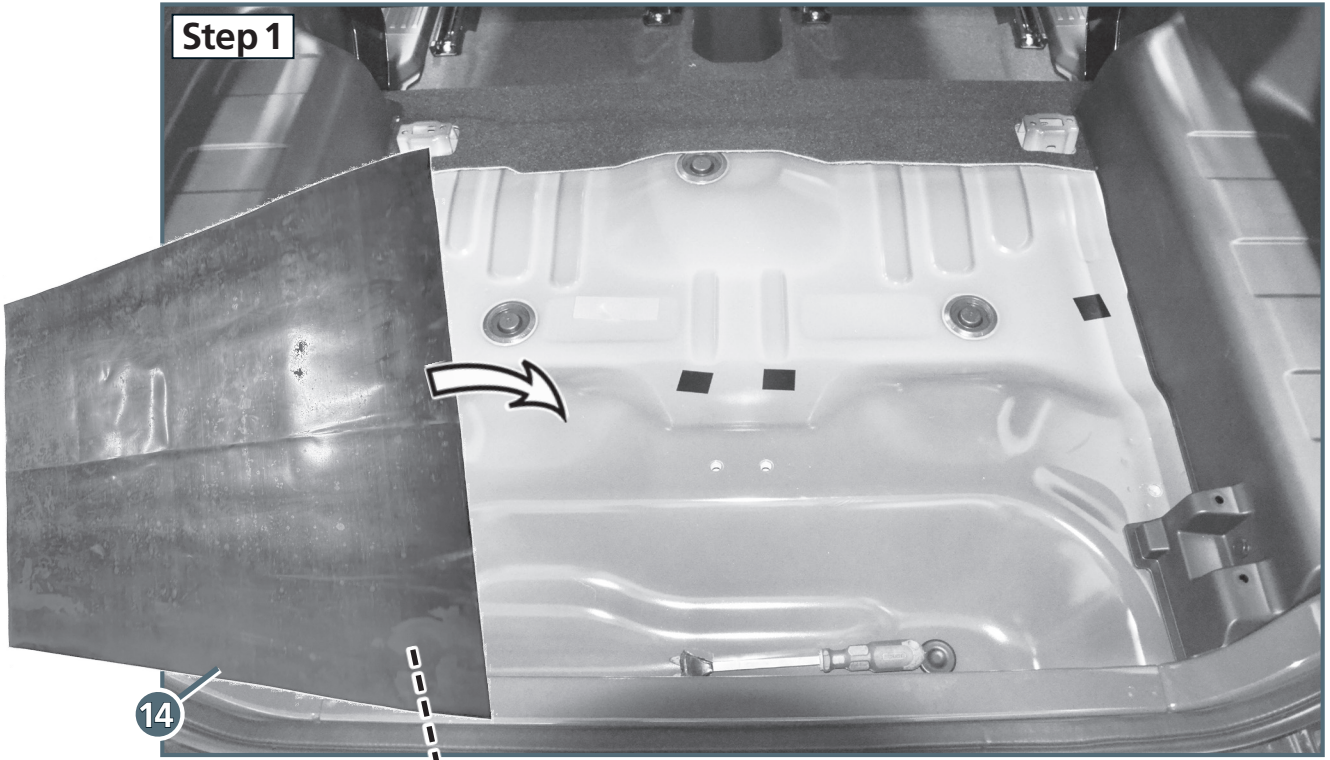

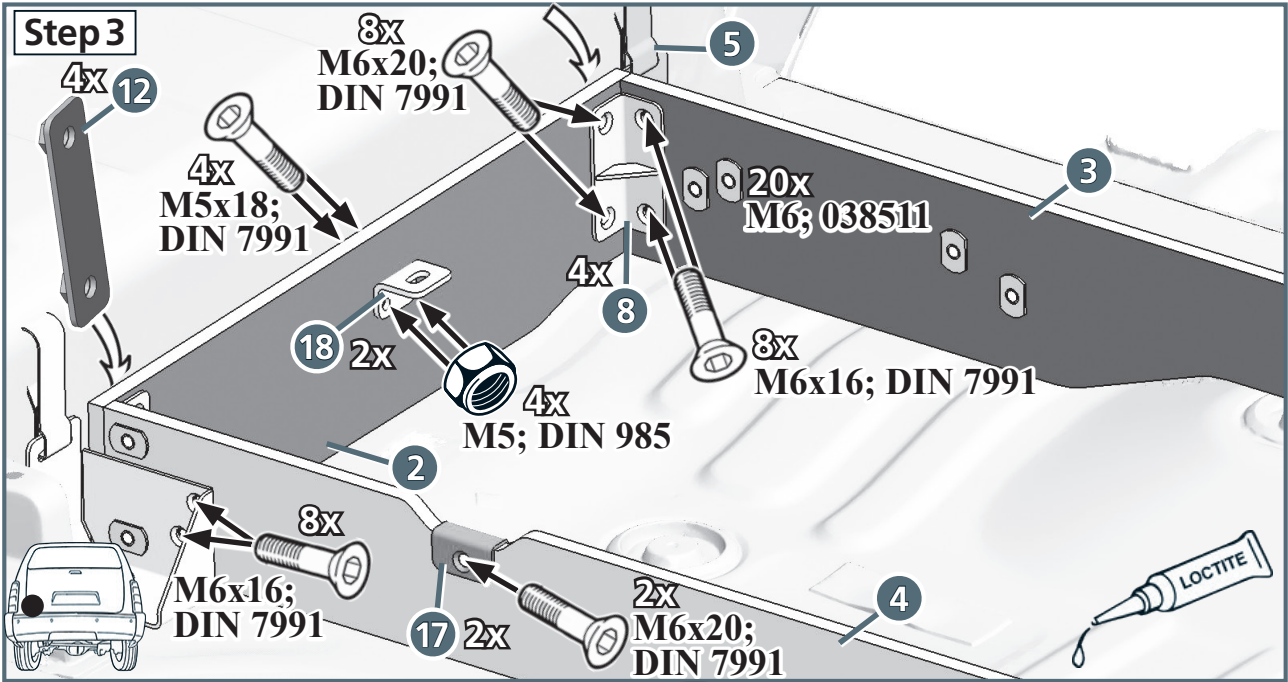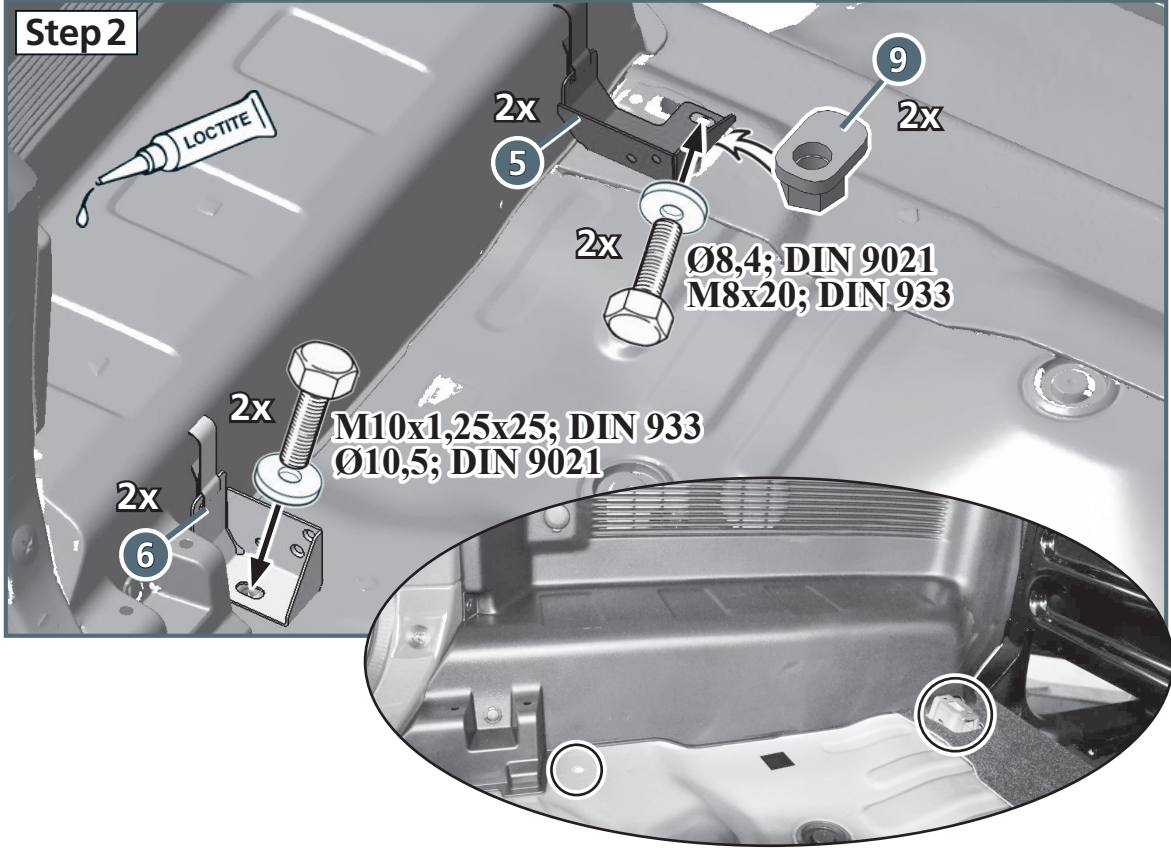

1 + 2

black side inside!
schwarze Seite innen!

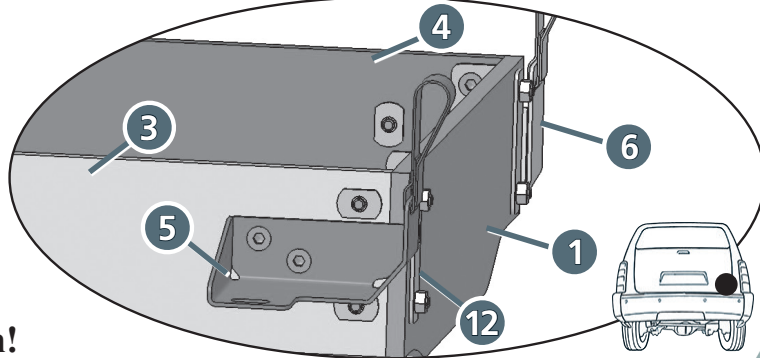

Revision 6: 06.08.2024



